

deltathree Inc.

**Linksys PAP2 Installation  
Instructions**

Last Update: November 2006



## LINKSYS PAP2 SET-UP INSTRUCTIONS



### *If you purchased the Linksys PAP2 directly from deltathree*

**deltathree completed the provisioning part of the process. The device is set to work with optimal settings and only with deltathree. You need to complete the configuration by applying specific user settings via our End User Interactive center at [iCallhere.com](http://icallhere.com).**

### **Configure your Linksys PAP2**

1. Go to <http://www.icallhere.com> and log in with your provisioning UserID and password. **You must use a special provisioning UserID and password provided by your Account Manager.**
2. Click "Go to My Devices."
3. Choose device type "Linksys PAP2" from the "Add new device" drop down list, and click "GO."
4. Follow the instructions on the screen to complete configuration.
5. Once you complete the instructions, connect the PAP2 to your network and start making VoIP calls:

- I) **Connect the phone:** Connect a telephone to "PHONE 1" of the two phone ports (as shown in the diagram below) on the Linksys;



- II) **Connect the unit to the network:** Use the Ethernet cable provided in the packaging and connect the "ETHERNET" port (as shown in the diagram below) on the Linksys PAP2 to a spare Ethernet port on your router;



- III) **Connect the power:** Connect the power cord to the receptacle on the Linksys PAP2 marked "POWER" (as shown in the diagram below), and the power adapter to an electrical outlet.



**If you did not purchase the device directly from deltathree**

### **Configure your Linksys PAP2**

1. Go to <http://www.icallhere.com> and log in with your provisioning UserID and password. **You must use a special provisioning User ID and password provided by your Account Manager.**
2. Click "Go to My Devices."
3. Choose device type "Linksys PAP2" from the "Add new device" drop down list, and click "GO."
4. Follow the instructions on the screen to complete configuration.
5. Once you complete the instructions, connect the PAP2 to your network and start making VoIP calls:

- I. **Connect the phone:** Connect a telephone to "PHONE 1" of the two phone ports (as shown in the diagram below) on the Linksys;



- II. **Connect the unit to the network:** Use the Ethernet cable provided in the packaging and connect the "ETHERNET" port (as shown in the diagram below) on the Linksys PAP2 to a spare Ethernet port on your router;



- III. **Connect the power:** Connect the power cord to the receptacle on the Linksys PAP2 marked "POWER" (as shown in the diagram below), and the power adapter to an electrical outlet.



### III. Get your Linksys PAP2's IP address

1. Use a touch tone telephone attached to Port 1 or Port 2 of the Linksys PAP2 and press the star key four times (\*\*\*\*) to enter the Linksys Configuration menu.
2. Find out your IP address and write it down.

Please use the table below for options and responses to the information you may use to configure the LINKSYS PAP2:

Action	Menu Choice	User Input	Notes
Enter IVR Menu	* * * *	None	None. Ignore SIT or other tones until you hear, "Linksys configuration menu. Please enter option followed by the pound key or hang-up to exit."
Check DHCP	100#	None	IVR will announce if DHCP is enabled or disabled.
Enable/Disable DHCP	101#	Enter 1 to enable Enter 0 to disable	
Check IP Address	110#	None	IVR will announce current IP Address of PAP2
Set Static IP Address	111#	Enter IP address using numbers on the telephone key pad. Use the *(star) key when entering a decimal point.	DHCP must be "Disabled" otherwise you will hear, "Invalid Option," if you try to set this value.
Check Network Mask	120#	None	IVR will announce the current network mask of PAP2.
Set Network Mask	121#	Enter value using numbers on the telephone key pad. Use the * (star) key when entering a decimal point.	DHCP must be "Disabled" otherwise you will hear, "Invalid Option," if you try to set this value.
Check Static Gateway IP Address	130#	None	IVR will announce the current gateway IP address of PAP2.
Set Static Gateway IP Address	131#	Enter IP address using numbers on the telephone key pad. Use the *(star) key when entering a decimal point.	DHCP must be "Disabled" otherwise you will hear, "Invalid Option," if you try to set this value.

### IV. PAP2 Provisioning

1. Open the Linksys PAP2 configuration page by typing [http://\(PAP2's IP address\)/admin/advanced](http://(PAP2's IP address)/admin/advanced) in an Internet browser.
  - **If you are not prompted for the user ID and password, continue to #2 below.**
  - **If you are prompted for a user ID and password,** please ask your device provider for the user ID and password, enter them in the requested fields and continue to # 2 below.
2. The browser will show a tabbed user interface. Enter the **Provisioning Tab** and make sure you have the following settings configured:

**Provision Enable: Yes**  
**Resync Periodic: 60**  
**Resync Error Retry Delay: 60**  
**Profile Rule: <http://tftp1.deltathree.com/rl-init.cfg>**

3. Proceed to the **System Tab** and make sure you have the following settings configured:

**Primary DNS: 213.137.73.254**  
**Secondary DNS: 208.170.171.93**

4. Save your settings by clicking the **Save Settings** button at the bottom of the page.

#### **IV. Start Making Calls!**

The unit will download a configuration file from deltathree's servers and will be fully configured within minutes.